


# LRT Exploded Parts

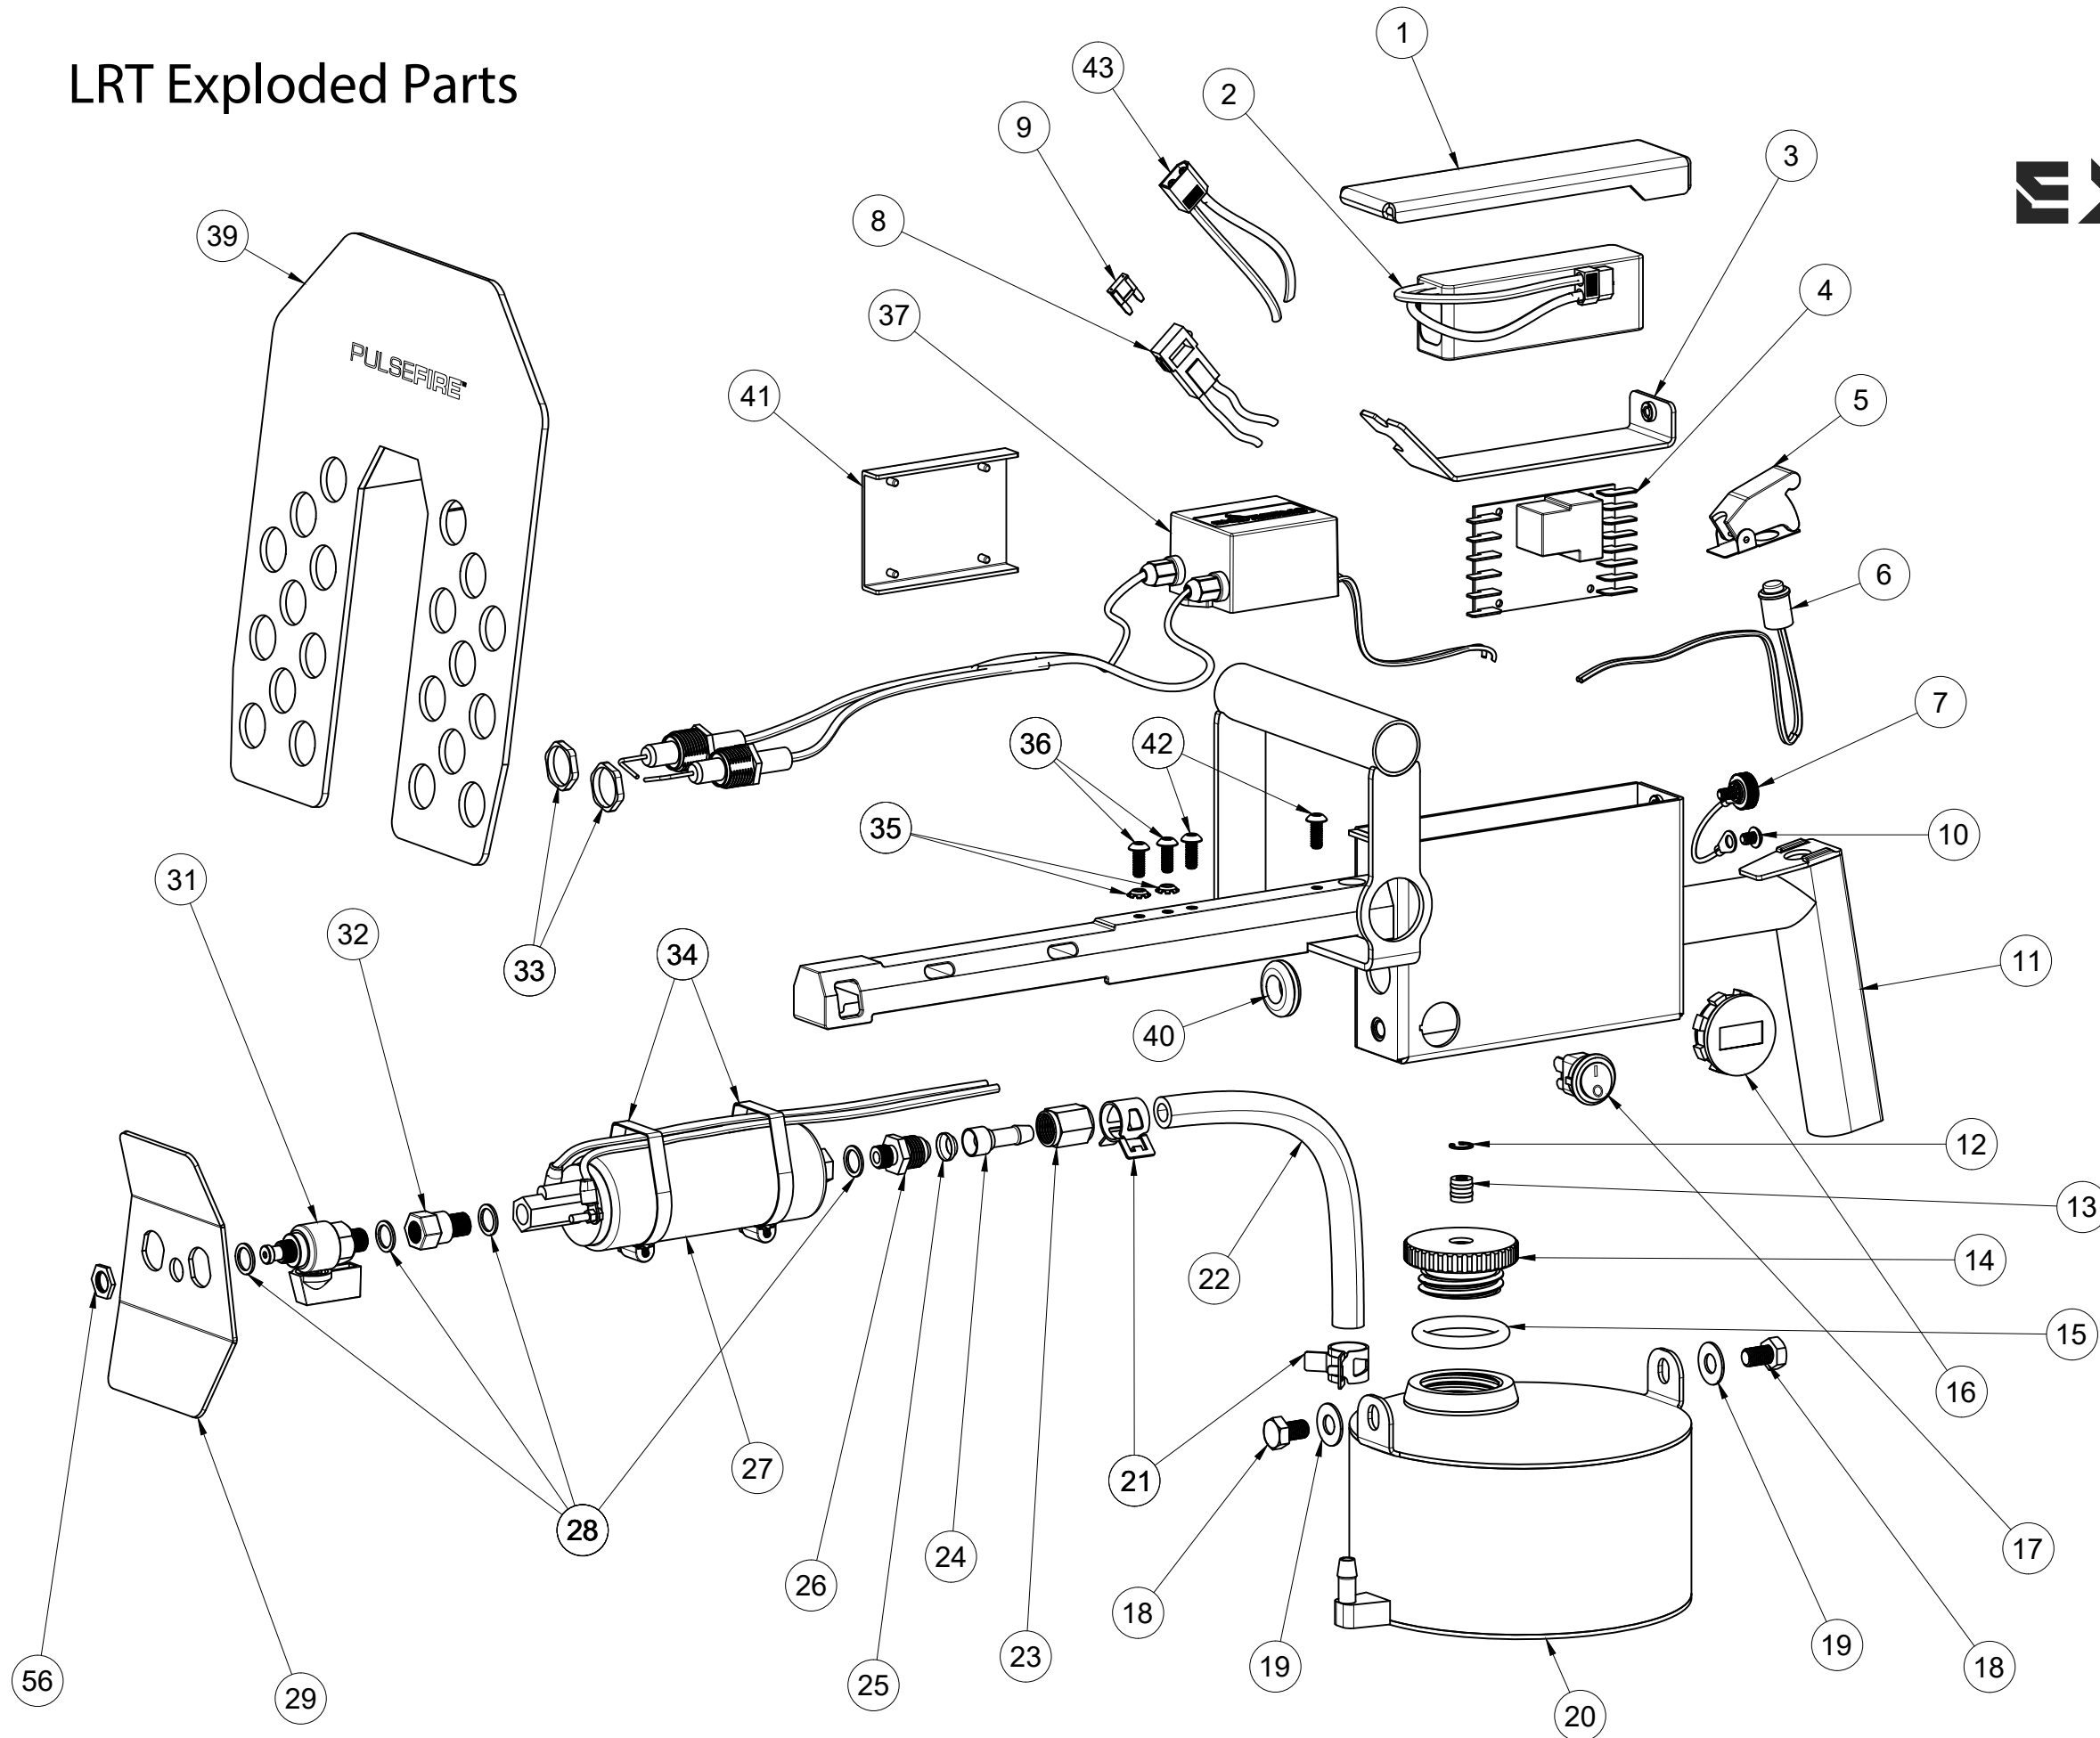

Item	Part Number
1	PART-LRT-LID-ODG
2	BATTERY-2200
3	PART-LRT-IBP
4	PART-PCBA
5	PART-SW-COVER
6	PART-SW-TRIG
7	THUMBSCREW-TETHER
8	PART-FUSEHOLDER
9	PART-FUSE
10	PART-SCREW-IBP
11	PART-LRT-WELDEDBODY-ODG
12	PART-SNAPRING-FUELCAP
13	PART-CV-CAP
14	PART-FUELCAP-ODG
15	PART-ORING-FUELCAP
16	PART-VOLT-GAUGE-ASM
17	PART-SW-4WP
18	PART-SCREW-FUEL-TANK
19	PART-WASHER-FUEL-TANK
20	PART-TANK-STD-ODG
21	PART-CLAMP-SPRING
22	PART-HOSE-VITON
25	PF-COPPER-SEALS-4
26	PART-37JIC-M10-ADAPTER
27	PART-FUELPUMP
28	PART-COPPERWASHER-M10
29	PART-NOZ-SHIELD
30	PART-NUT-NOZZLE
31	PF-NOZZLE-STANDARD
32	PART-CV-PUMP
33	PART-NUT-ELECTRODE
34	PART-CLAMP-PUMP
35	PART-WASHER-HEATSHIELD
36	PART-SCREW-HEATSHIELD
37	HVT-KIT
39	PART-LRT-HEATSHIELD-ODG
40	PART-GROMMET
41	PART-PCBA-COVER
42	PART-SCREW-HVT
43	PART-XT60-WIRES